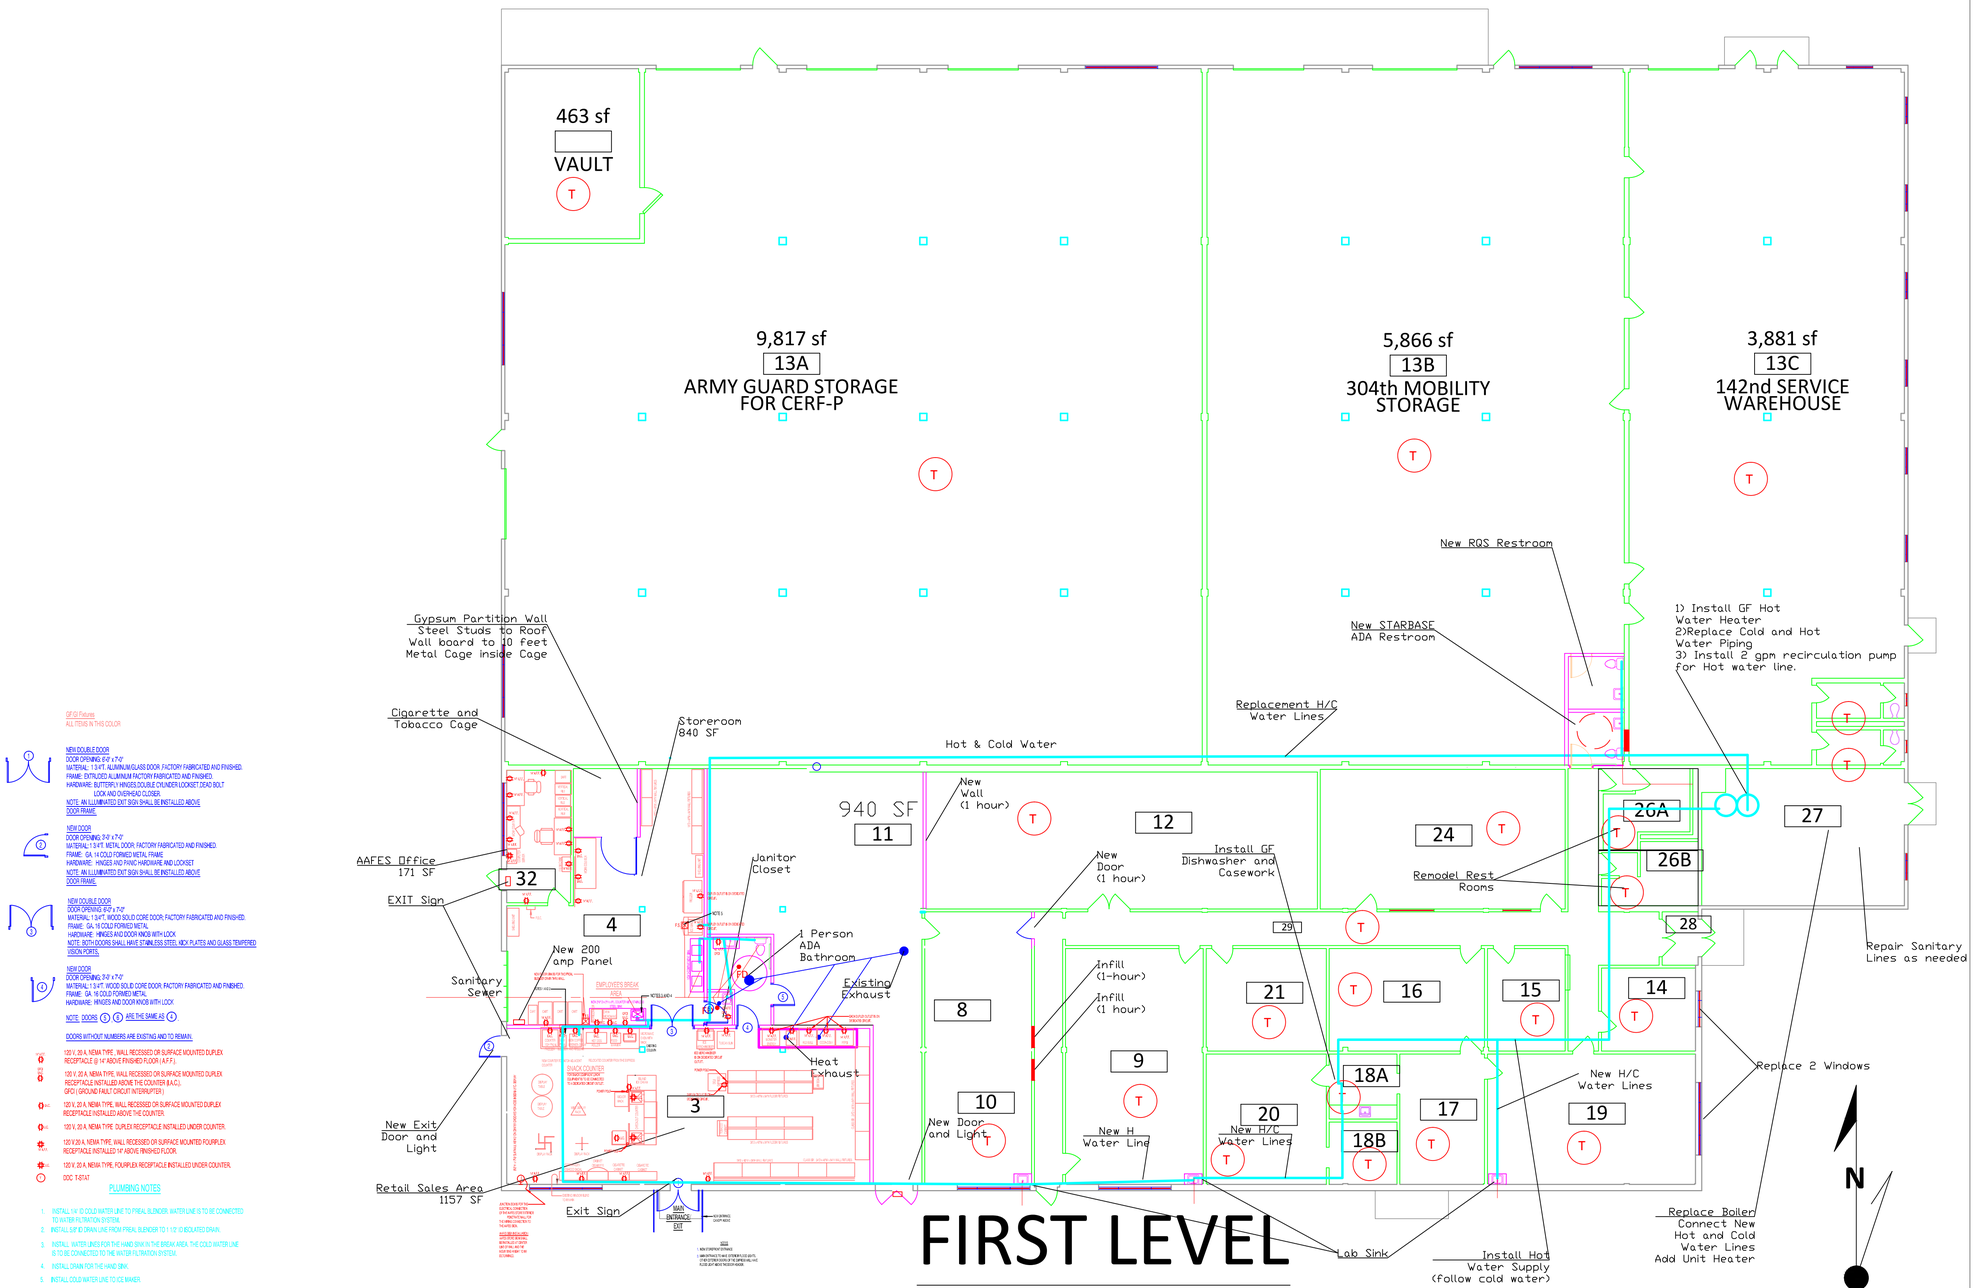

FIRST LEVEL

BLDG 165
Construction

GF/GI Fixtures
ALL ITEMS IN THIS COLOR

NEW DOUBLE DOOR
DOOR OPENING: 6'-0" x 7'-0"
MATERIAL: 1 3/4"T. ALUMINUM GLASS DOOR. FACTORY FABRICATED AND FINISHED.
FRAME: EXTRUDED ALUMINUM FACTORY FABRICATED AND FINISHED.
HARDWARE: BUTTERFLY HINGES DOUBLE CYLINDER LOCKSET DEAD BOLT
LOCK AND OVERHEAD CLOSER.
NOTE: AN ILLUMINATED EXIT SIGN SHALL BE INSTALLED ABOVE DOOR FRAME.

NEW DOOR
DOOR OPENING: 3'-0" x 7'-0"
MATERIAL: 1 3/4"T. METAL DOOR. FACTORY FABRICATED AND FINISHED.
FRAME: GA. 14 COLD FORMED METAL FRAME
HARDWARE: HINGES AND PANIC HARDWARE AND LOCKSET
NOTE: AN ILLUMINATED EXIT SIGN SHALL BE INSTALLED ABOVE DOOR FRAME.

NEW DOUBLE DOOR
DOOR OPENING: 6'-0" x 7'-0"
MATERIAL: 1 3/4"T. WOOD SOLID CORE DOOR. FACTORY FABRICATED AND FINISHED.
FRAME: GA. 16 COLD FORMED METAL
HARDWARE: HINGES AND DOOR KNOB WITH LOCK.
NOTE: BOTH DOORS SHALL HAVE STAINLESS STEEL KICK PLATES AND GLASS TEMPERED VISION PORTS.

NEW DOOR
DOOR OPENING: 3'-0" x 7'-0"
MATERIAL: 1 3/4"T. WOOD SOLID CORE DOOR. FACTORY FABRICATED AND FINISHED.
FRAME: GA. 16 COLD FORMED METAL
HARDWARE: HINGES AND DOOR KNOB WITH LOCK.

NOTE: DOORS 5 6 ARE THE SAME AS 4

DOORS WITHOUT NUMBERS ARE EXISTING AND TO REMAIN.

120 V, 20 A, NEMA TYPE, WALL RECESSED OR SURFACE MOUNTED DUPLEX RECEPTACLE @ 14" ABOVE FINISHED FLOOR (A.F.F.).

120 V, 20 A, NEMA TYPE, WALL RECESSED OR SURFACE MOUNTED DUPLEX RECEPTACLE INSTALLED ABOVE THE COUNTER (A.A.C.).
GFCI (GROUND FAULT CIRCUIT INTERRUPTER)

120 V, 20 A, NEMA TYPE, WALL RECESSED OR SURFACE MOUNTED DUPLEX RECEPTACLE INSTALLED ABOVE THE COUNTER.

120 V, 20 A, NEMA TYPE DUPLEX RECEPTACLE INSTALLED UNDER COUNTER.

120 V,20 A, NEMA TYPE, WALL RECESSED OR SURFACE MOUNTED FOURPLEX RECEPTACLE INSTALLED 14" ABOVE FINISHED FLOOR.

120 V, 20 A, NEMA TYPE, FOURPLEX RECEPTACLE INSTALLED UNDER COUNTER.

DOC T-6147

PLUMBING NOTES

1. INSTALL 1/4" ID COLD WATER LINE TO PREAL BLENDER. WATER LINE IS TO BE CONNECTED TO WATER FILTRATION SYSTEM.
2. INSTALL 5/8" ID DRAIN LINE FROM PREAL BLENDER TO 1 1/2" ID ISOLATED DRAIN.
3. INSTALL WATER LINES FOR THE HAND SINK IN THE BREAK AREA. THE COLD WATER LINE IS TO BE CONNECTED TO THE WATER FILTRATION SYSTEM.
4. INSTALL DRAIN FOR THE HAND SINK.
5. INSTALL COLD WATER LINE TO ICE MAKER.

INSTALL NEW VITREOUS CHINA FLOOR SINK.

INSTALL NEW FLOOR DRAIN.
INSTALL EITHER A WALL OR FLOOR CLEAN OUT.

DATE:	3 May 2014
SCALE:	1:200
DRAWN:	----
CHECK:	----
SHEET:	1 OF 1

FP01

BUILDING 165

Portland Air National Guard 142nd Fighter Wing
6801 NE Cornfoot Rd, Portland, Oregon 97218

U:\142-CES_CEN\Projects\165\2016 TQK016028 Repair Bldg 165\Design\SRM SOW\165 Interior Upgrades 2016-05-20.dwg, ANGELO, -CONST, 6/15/2016 7:54:31 AM